

# KBL 2.4 Model Documentation

## Class Index

This is the documentation of the VEC UML-Model. The detailed specification of classes and enumerations can be found here:

- [Index - Alphabetical](#)
- [Index - Elements by Module](#)

## Documentation Index

The documentation of the specific areas and topics can be found in the following pages.

*Note: The diagrams support navigation to the corresponding class descriptions by clicking on the shape of a class.*

- [1 Connection Overview](#)
- [2 Common part attributes and properties](#)
- [3 Part specializations](#)
- [4 Harness and Modules](#)
- [5 Part master data \(1\)](#)
- [6 Part master data \(2\)](#)
- [7 Connectivity](#)
- [8 Part usage list \(1\)](#)
- [9 Part usage list \(2\)](#)
- [10 Part usage list \(3\)](#)
- [11 Part usage list \(4\)](#)
- [12 Part usage list \(5\)](#)
- [13 Part usage list \(6\)](#)
- [14 Part usage list \(7\)](#)
- [15 Part usage list \(8\)](#)
- [16 Part usage list \(9\)](#)
- [17 Part usage list \(10\)](#)
- [18 Topology and routing \(1\)](#)
- [19 Topology and routing \(2\)](#)
- [20 Topology and routing \(3\)](#)
- [21 Dimensions](#)
- [22 Change Description](#)
- [23 Miscellaneous](#)
- [24 KBL\\_Container](#)

From:

<http://ecad-wiki.prostep.org/> - **prostep ivip WIKI**

Permanent link:

[http://ecad-wiki.prostep.org/doku.php?id=models:kbl\\_v2\\_4:start](http://ecad-wiki.prostep.org/doku.php?id=models:kbl_v2_4:start)

Last update: **2014/11/07 15:25**

